



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for PANASONIC LUMIX DMC-TZ5. You'll find the answers to all your questions on the PANASONIC LUMIX DMC-TZ5 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual PANASONIC LUMIX DMC-TZ5
User guide PANASONIC LUMIX DMC-TZ5
Operating instructions PANASONIC LUMIX DMC-TZ5
Instructions for use PANASONIC LUMIX DMC-TZ5
Instruction manual PANASONIC LUMIX DMC-TZ5

Panasonic®

Operating Instructions
Digital Camera

Model No. **DMC-TZ5**
DMC-TZ4



Before use, please read these instructions completely.



Web Site: <http://www.panasonic-europe.com>

EB

VQT1P91



[Your user manual](#)
[PANASONIC LUMIX DMC-TZ5](#)

Manual abstract:

Carefully observe copyright laws. Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted. **THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.** Figure B Fuse cover 2. Replace the fuse and close or attach the fuse cover. Figure A Fuse (5 ampere) Figure B Fuse (5 ampere) 2 VQT1P91 VQT1P91 3 Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households) This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product. Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation. Quick start guide The battery is not charged when the camera is shipped. Charge the battery and set the clock before use. When you do not use the card (optional), you can record or play back pictures on the built-in memory (P.

18). 1 2 3 4 5 6 Charge the battery Insert the battery and the card Turn on the power Set REC/PLAY switch to For business users in the European Union If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information. Information on Disposal in other

Countries outside the European Union This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal. Sales and Support Information Customer Care Centre . . . For customers within the UK:

0844 844 3852 For customers within the Republic of Ireland: 01 289 8333 Visit our website for product information E-mail: customer.

care@panasonic.co.uk Set the mode dial to Technical Support for AV Software · For customers within the UK: 0844 844 3869 · For customers within the Republic of Ireland: 01 289 8333 Direct Sales at Panasonic UK · Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre MondayThursday 9.00 a.m.-5.30 p.m., Friday 9.30 a.

m.5.30 p.m. (Excluding public holidays) · Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk. · Most major credit and debit cards accepted. · All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.

· It couldn't be simpler! · Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details. Interested in purchasing an extra guarantee? Please call 0870 240 6284 or visit our website www.panasonic.co.uk/guarantee.

Press the shutter button and take pictures To play back the pictures Note Example screens displayed in this manual are for DMC-TZ5 model. 1. Set REC/PLAY switch to . 2. Select the picture you want to view.

Previous Next 1000001 1/9 DMC-TZ4: 10:00 15.MAR.2008 4 VQT1P91 VQT1P91 5 Record, view, save those precious Record INTELLIGENT AUTO Make ideal settings for the subject and distance just by pointing the camera! (P.28) moments. Cards may be inserted directly into devices with SD memory card slots. SD memory card/ SDHC memory card 2 (optional) (Playback) on large screen (P.86) View Automatically reads the scene to take crisper pictures! Enjoy crisp pictures on large screens! AV cable (supplied) Component cable (optional) Enjoy videos in HD 3 on TV with component terminals (1080i) by using a component cable..



[Your user manual](#)

[PANASONIC LUMIX DMC-TZ5](#)